## Maintenance schedule

## 0187 - F 650 CS

**00 00 122 BMW Service (see Maintenance Schedule)** (initially at 10,000 km, then every 20,000 km)

Reading fault-code memories with the BMW Motorrad diagnostic system		
Changing engine oil (engine and oil tank) and oil filter element		
11 41 540 Cleaning oil strainer (without draining/topping up engine oil) *)	once only at 10,000 km	
Checking coolant level		
Greasing rubber grommets for cover insert		
Checking valve clearance		
Replacing spark plugs	initially at 30,000 km, then every 20,000 km	
Draining intake air silencer		
Checking battery acid level		
Checking clutch play		
Checking front brake pads for wear		
Checking front brake disc for wear		
Checking rear brake pads for wear		
Checking rear brake disc for wear		
Checking front brake fluid level		
Checking brake-fluid level, rear brake		
Checking toothed belt		
Checking belt tension		
Checking steering head bearing play		
Checking operation of side-stand switch		
Lubricating side stand		

Checking specified torque of threaded fasteners with torque wrench: engine / engine carrier / frame and cylinder head / main frame

Checking specified torque of threaded fasteners with torque wrench: main frame and rear frame

Checking specified torque of threaded fasteners with torque wrench: eccentric clamp

Checking specified torque of threaded fasteners with torque wrench: exhaust system

Checking tyre pressures and tread depth

Checking lights and signalling equipment

Final inspection and function check

Confirming BMW Service in on-board documentation

\*) Billed as a separate item

not as per the normal schedule

 $\square$