Maintenance schedule 0186 - F 650 GS Dakar

00 00 122 BMW Service (see Maintenance Schedule) (initially at 10,000 km, then every 20,000 km)

Reading fault-code memories with the BMW Motorrad diagnostic system	
Changing engine oil (engine and oil tank) and oil filter element	
Checking coolant level	
Checking valve clearance	
Replacing spark plugs	initially at 30,000 km, then every 20,000 km
Emptying drain hose from intake air silencer	
Checking clutch play	
Checking spoke tension, adjusting if necessary	
Checking front brake pads for wear	
Checking front brake disc for wear	
Checking rear brake pads for wear	
Checking rear brake disc for wear	
Checking front brake fluid level	
Checking brake-fluid level, rear brake	
Checking chain, chain sprocket and chain pinion	
Checking chain takeup roller and slider rail	
Checking chain tension	
Checking battery acid level	
Checking steering head bearing play	
Checking operation of side-stand switch	
Lubricating side stand	
Lubricating footbrake lever	

Checking specified torque of threaded fasteners with torque wrench: engine / main frame, engine / engine

06/2006

carrier and cylinder head / main frame	
Checking specified torque of threaded fasteners with torque wrench: main frame / rear frame, frame bottom section / main frame and engine carrier / main frame	
Checking specified torque of threaded fasteners with torque wrench: footrest plate / main frame and side stand / bottom truss	
Checking specified torque of threaded fasteners with torque wrench: exhaust system	
Checking specified torque of threaded fasteners with torque wrench: spring strut / angled lever / frame / reaction link	
Checking tyre pressures and tread depth	
Checking lights and signalling equipment	
Final inspection and function check	
Confirming BMW Service in on-board documentation	