

# Maintenance schedule

## 0227 - F 800 R, K73 02

---

### 00 00 111 BMW Service

---

Reading fault memory with **BMW Motorrad** diagnostic system

11 00 611 Oil change, engine, with filter

Annually or every 10,000 km

11 34 502 Checking valve clearance (for maintenance)

Every 20,000 km

12 12 509 Replace all spark plugs (as part of maintenance)

Every 40,000 km

13 72 505 Replace air filter cartridge (for maintenance)

Every 20,000 km

Checking coolant level

Checking/adjusting clutch play

Checking freedom of movement of throttle cable and checking for kinks and chafing

Checking front brake pads and brake discs for wear

Checking rear brake pads and brake disc for wear

Visual inspection of the brake pipes, brake hoses and connections

Check tire pressures and tread depth

Checking and lubricating chain drive

Checking brake-fluid level, front brakes

Checking brake-fluid level, rear brakes

Checking steering-head bearing

Checking ease of movement of side stand

Checking lights and signaling equipment

Function test, engine start suppression

Final inspection and check of roadworthiness

Reading fault memory with **BMW Motorrad** diagnostic system

Setting service-due date and service countdown distance

Checking battery charge state

Confirming BMW Service in on-board documentation