

Maintenance schedule

0227 - F 800 R, K73 02

00 00 111 BMW Service

Reading fault memory with **BMW Motorrad** diagnostic system

11 00 611 Oil change, engine, with filter

Annually or every 10,000 km

Checking coolant level

Checking/adjusting clutch play

Checking freedom of movement of throttle cable and checking for kinks and chafing

Checking front brake pads and brake discs for wear

Checking rear brake pads and brake disc for wear

Visual inspection of the brake pipes, brake hoses and connections

Check tire pressures and tread depth

Checking and lubricating chain drive

34 00 504 Change brake fluid in entire system

Initially after one year, then every two years

Checking steering-head bearing

Checking ease of movement of side stand

Checking lights and signaling equipment

Function test, engine start suppression

Final inspection and check of roadworthiness

Reading fault memory with **BMW Motorrad** diagnostic system

Setting service-due date and service countdown distance

Checking battery charge state

Confirming BMW Service in on-board documentation