Maintenance schedule

0226 - F 800 S

00 00 128 BMW Inspection (see Maintenance Schedule) (every 20,000 km)

Reading fault memory with (BMW Motorrad) diagnostic system
Engine-oil change, with filter
Checking coolant level
Reading out countdown distance to next valve-clearance check and replacement of spark plugs
Replacing air filter element
Checking/adjusting clutch play
Visual inspection of the brake pipes, brake hoses and connections
Checking front brake discs for wear
Checking front brake pads for wear
Check the brake-fluid level, front brakes
Check the rear brake disc for wear
Check the rear brake pads for wear
Check the brake-fluid level, rear brakes
27 72 550 Replacing toothed belt with judder damper (for maintenance) *)
Checking toothed belt
Checking belt pulley and belt pinion
Checking belt tension
Checking steering head bearing play
Checking ease of movement of side stand
Checking tyre pressures and tread depth
Checking specified torque of threaded fasteners with torque wrench: main frame
Checking specified torque of threaded fasteners with torque wrench: front footrest plates
Checking specified torque of threaded fasteners with torque wrench: exhaust manifold

Checking specified torque with torque wrench: eccentric clamp	
Checking lights and signalling equipment	
Function test, engine start suppression	
Test ride as final inspection and function check	
Reading fault memory with (BMW Motorrad) diagnostic system	
Checking battery charge state	
Confirming BMW Service in on-board documentation	

*) Billed as a separate item

not as per the normal schedule