Maintenance schedule

0594 - K 1200 R

00 00 128 BMW Inspection (see Maintenance Schedule) (every 20,000 km)

Equipment trim-level variant: 0645 - (BMW Motorrad Integral ABS)

Reading fault memory with (BMW Motorrad) diagnostic system	
Reading out countdown distance to next valve-clearance check	
Performing bleed test with the BMW Motorrad diagnostic system	
Oil change in engine and oil tank, with filter	
Checking transparency of hose for oil level indicator	
12 12 511 Replacing all spark plugs (trim panel removed) *)	every 40,000 km
Changing intake air filter	
Checking front brake discs for wear	
Checking front brake pads for wear	
Checking brake-fluid level, front brakes	
Checking rear brake disc for wear	
Checking rear brake pads for wear	
Checking brake-fluid level, rear brakes	
Checking freedom of movement of throttle cable and checking for kinks and chafing	
Checking coolant level	
Checking tyre pressures and tread depth	
Checking ease of movement of side stand	
Checking lights and signalling equipment	
Function test, engine start suppression	
Lubricating ball-joint clamp and ball	
Test ride as final inspection and function check	
Reading fault memory with (BMW Motorrad) diagnostic system	
Checking battery charge state	
Confirming BMW Service in on-board documentation	

not as per the normal schedule

*) Billed as a separate item