Maintenance schedule 0509 - K 1300 S, K40 11

Reading fault memory with BMW Motorrad diagnostic system	
Checking transparency of hose for engine-oil level indicator	
11 00 609 Oil change in engine with filter (for maintenance)	Annually or every 10,000 km
33 00 501 Oil change, rear wheel drive	every two years or every 20,000 km
Visually inspecting brake pipes, brake hoses and connections	
Checking front brake pads and brake discs for wear	
34 00 548 Changing brake fluid, front brakes	initially after one year, then every two years
Checking rear brake pads and brake disc for wear	
34 00 549 Changing brake fluid, rear brakes	initially after one year, then every two years
Checking clutch system	
Checking freedom of movement of throttle cable and checking for kinks and c	chafing
Checking coolant level	
Checking tyre pressures and tread depth	
Checking ease of movement of side stand	
Checking lights and signalling equipment	
Function test, engine start suppression	
Final inspection and check of roadworthiness	
Reading fault memory with BMW Motorrad diagnostic system	
Setting service-due date and service countdown distance	
Check the battery charge state	•
Confirming BMW Service in on-board documentation	 -