

Maintenance schedule

0498 - R 1150 RS

00 00 131 BMW Inspection with Annual Inspection (see Maintenance Schedule) (annually, every 20,000 km)

Equipment trim-level variant:

0645 - BMW Motorrad Integral ABS (partially integral)

Reading fault-code memories with the BMW Motorrad diagnostic system		<input type="checkbox"/>
Changing engine oil with engine at operating temperature, replacing oil filter		<input type="checkbox"/>
Changing oil in gearbox, warmed to normal operating temperature		<input type="checkbox"/>
33 00 501 Oil change, rear wheel drive *)	every two years or every 40,000 km	<input checked="" type="checkbox"/>
16 12 503 Replace fuel filter (fairing/fuel tank removed) *)	every 40,000 km	<input checked="" type="checkbox"/>
Checking battery acid level		<input type="checkbox"/>
Cleaning and greasing battery terminals		<input type="checkbox"/>
Replacing intake air filter		<input type="checkbox"/>
34 00 706 Additional work, motorcycle with ABS: changing brake fluid in all wheel circuits (for maintenance) *)		<input type="checkbox"/>
34 00 608 Change brake fluid in entire ABS control circuit (maintenance) *)	every four years	<input checked="" type="checkbox"/>
Checking clutch fluid level		<input type="checkbox"/>
21 00 505 Change the clutch fluid (during maintenance) *)	every four years	<input checked="" type="checkbox"/>
Checking rear wheel bearing play by tilting wheel		<input type="checkbox"/>
Checking swinging-arm pivot mount		<input type="checkbox"/>
Checking operation of side-stand switch		<input type="checkbox"/>
Greasing side stand pivot		<input type="checkbox"/>
Cleaning and greasing shaft for windscreen adjuster		<input type="checkbox"/>
12 31 657 Repleace belt for generator (as part of maintenance) *)	every 40,000 km	<input checked="" type="checkbox"/>
Replacing spark plugs		<input type="checkbox"/>
Adjusting valve clearance		<input type="checkbox"/>
Checking freedom of movement of throttle cable and checking for kinks and chafing		<input type="checkbox"/>

34 00 650 Brake check for BMW Motorrad Integral ABS (as part of maintenance) *)	<input type="checkbox"/>
Checking/adjusting synchronisation	<input type="checkbox"/>
Checking tyre pressures and tread depth	<input type="checkbox"/>
Checking lights and signalling equipment	<input type="checkbox"/>
Test ride as final inspection and function check	<input type="checkbox"/>
Confirming BMW Service in on-board documentation	<input type="checkbox"/>

*) Billed as a separate item

not as per the normal schedule