## Maintenance schedule 0499 - R 1150 RT

00 00 128 BMW Inspection (see Maintenance Schedule) (every 20,000 km)

Reading fault-code memories with the BMW Motorrad diagnostic system	
Performing bleed test with the BMW Motorrad diagnostic system	
Changing engine oil with engine at operating temperature, replacing oil filter	
Changing oil in gearbox, warmed to normal operating temperature	
33 00 501 Oil change, rear wheel drive *)	every two years or every 40,000 km
16 12 525 Replace the fuel filter (during maintenance) *)	every 40,000 km
Checking battery acid level	
Cleaning and greasing battery terminals	
Replacing intake air filter	
Checking front brake fluid level	
Checking brake-fluid level, rear brake	
Visual inspection of the brake pipes, brake hoses and connections	
Checking front brake pads for wear	
Checking front brake discs for wear	
Checking rear brake pads for wear	
Checking rear brake discs for wear	
Checking clutch fluid level	
Checking rear wheel bearing play by tilting wheel	
Checking swinging-arm pivot mount	
Checking operation of side-stand switch	
Greasing side stand pivot	
12 31 657 Repleace belt for generator (as part of maintenance) *)	every 40,000 km
Replacing spark plugs	

Adjusting valve clearance	
Checking freedom of movement of throttle cable and checking for kinks and chafing	
Checking/adjusting synchronisation	
Checking tyre pressures and tread depth	
Checking lights and signalling equipment	
Test ride as final inspection and function check	
Confirming BMW Service in on-board documentation	
*) Billed as a separate item not as per the normal schedule	