Maintenance schedule

0439 - R 1150 R

00 00 125 BMW Service with Annual Inspection (see Maintenance Schedule) (annually, initially at 10,000 km, then every 20,000 km)

Equipment trim-level variant: 0645 - BMW Motorrad Integral ABS

Reading fault-code memories with the BMW Motorrad diagnostic system	
Changing engine oil with engine at operating temperature, replacing oil filter	
23 00 510 Gearbox-oil change (maintenance) *) every two years	
33 00 501 Oil change, rear wheel drive *) every two years or every 40,000 km	
Checking battery acid level	
Cleaning and greasing battery terminals	
34 00 706 Additional work, motorcycle with ABS: changing brake fluid in all wheel circuits (for maintenance) *)	
34 00 608 Change brake fluid in entire ABS control circuit (maintenance) *) every four years	
Checking clutch fluid level	
21 00 505 Change the clutch fluid (during maintenance) *) every four years	
Checking operation of side-stand switch	
Greasing side stand pivot	
12 31 610 Tension Poly-V belt (associated work) *) once only at 10,000 km	
Checking condition of spark plugs	
Adjusting valve clearance	
Checking freedom of movement of throttle cable and checking for kinks and chafing	
34 00 650 Brake check for BMW Motorrad Integral ABS (as part of maintenance) *)	
Checking/adjusting synchronisation	
Checking tyre pressures and tread depth	
Checking lights and signalling equipment	
Test ride as final inspection and function check	
Confirming BMW Service in on-board documentation	

not as per the normal schedule

*) Billed as a separate item